

Thank you for purchasing an "Outdoor Revolution" product, this product will give years of satisfactory service, if basic instructions are followed; our products are designed for durability and ease of erection.



Outdoor Revolution Awnings are distributed by:

www.outdoor-revolution.com

Unit 1 Brick Park

Bretfield Court

Bretton Street Industrial Estate

Dewsbury

West Yorkshire

WF12 9BY



Movelite Canopy Instructions & Care Manual



THE WARRANTY (CONTINUED...)

- Flaws in the fabric caused by excessive use.
- Imperfections and pulls in mesh doors due to wear and tear.
- Water ingress through fabric, as a result of UV degradation.
- Water ingress through seams, caused by excessive abrasion of seams or taped seam.
- Broken zips, caused by over tensioning, forcing or snagging.
- Over tensioned/stretched seams coming apart.
- Buckles subjected to undue force or abrasion.
- Lost/popped out eyelets.
- Broken holdalls.
- Pole breakages or tube punctures (where applicable).
- Collateral damage from a pole breakage .
- UV degradation.
- Condensation, (a natural occurrence, exacerbated by insufficient ventilation opening).
- Consequential damage/loss to property/belongings (either inside or outside of the product) or shortening of holidays

Outdoor Revolution work very closely with our retail partners to manage all warranty repairs/issues:

****Please contact your retailer immediately (even if purchased online), if you feel your “Outdoor Revolution” product has a genuine warranty issue. The retailer, in turn, will raise the issue with ourselves and we will action, with the retailer, according to the nature of the claim.**

****Please ensure that the product is clean and dry and as close to its original condition as possible, before sending back for checking.**

****Wet or dirty products will not be accepted back for checking/warranty claims.**

**** It is important to note that the sales contract between yourself and the retailer you purchased the “Outdoor Revolution” product from, remains valid throughout any warranty claim and your statutory rights are not affected.**

IMPORTANT INFORMATION

- ⇒ Please do not leave for your holiday without fully erecting and checking you have all of the contents for your canopy. If you are missing anything, please contact your retailer immediately before use.
- ⇒ Please also note that man-made fabrics are prone to condensation when the warm air and moisture inside the canopy, comes into contact with the colder outside of the tent fabric; this is a perfectly natural occurrence and should not be confused with leaking.
- ⇒ Ideally, erect your canopy for some period before use - allowing the canvas to weather. ‘Weathering’ can take a few uses of the canopy before it becomes fully effective. Seam sealant can be used to seal any persistent weeps; this process is completely normal. ‘Weathering’ is the process of allowing your canvas product get wet, then dry approximately two to three times in order to strengthen and further waterproof the seams and stitching on the fabric.
- ⇒ Make sure that before erecting, you site the canopy on clear, level ground, with no sharp objects underneath, and that all zips are fully closed.
- ⇒ We suggest conducting a trial run of your canopy to familiarise yourself with the set up and use of the canopy; if you have any issues relating to pitching your canopy, please contact your dealer for help before going on holiday.
- ⇒ After use, always dry and air the canopy before packing away, to prevent mildew or mould.
- ⇒ Any dirt or stains can be removed by brushing or gently washing with warm water. DO NOT use detergents, as this will destroy the waterproofing on the fabrics.
- ⇒ DO NOT cook or smoke in this canopy; although the outer fabric is flame retardant treated, it will still melt.
- ⇒ In the event of damage; please contact your retailer. If you cannot get in touch with them, use our contact form on our website: www.outdoor-revolution.com, and our customer service team will be happy to assist!

PLEASE READ THE FOLLOWING ERECTION INSTRUCTIONS CAREFULLY

TIP: Refer to the photographs to help when pitching your 'Movelite Canopy'.

1. Spread out the flysheet on the ground, with the long zip laid near the front of your already pitched tent.



2. Zip the canopy onto the front of the awning/tent, using the already sewn-on zip.

3. Locate the pole and assemble all of the pieces together.

4. Next, thread the pole through the sleeve and insert the metal pin from the ring, pinning it into the bottom of the pole on both sides.



OUTDOOR REVOLUTION GUARANTEE

"Outdoor Revolution" products are designed and produced to the highest possible manufacturing standards. The best quality fabrics and components available are used for each specific item and a rigorous checking process of finished products is in place.

All finished products are:-

- Checked for and are free of minor defects
- Are fit for the purpose/use that they are intended
- Are of a satisfactory quality

It is important that correct care is taken when opening, erecting, using and just as importantly, packing away the product. Following these rules will keep your product in reliable working condition for many years. Failure to adhere to these simple guidelines may cause unnecessary damage to the product (see formal instructions for hints and tips on handling/erecting the product). A repair kit is included with the product to help resolve any minor issues.

THE WARRANTY

The "Outdoor Revolution Warranty" lasts for 12 months from the original date of purchase (please keep all receipts or copies of any relevant transaction to substantiate the purchase date). The warranty only covers workmanship and fabric/components. Any faults found within 6 months of purchase will be investigated by "Outdoor Revolution". Faults found outside of the initial six months of purchase will need to be proven by you, the purchaser, in line with current consumer legislation, after the short term right to reject has ended.

Retailer will not refund a purchase if no fault is found.

Product warranty must be registered **BEFORE** use, via: www.outdoor-revolution.com and as soon as possible from the date of purchase.

The manufacturer's warranty does not cover the following:-

- General wear and tear over extended periods of use or seasonal pitching of the product.
- Accidental damage caused by, but not exclusive to, humans, animals or weather.

PACKING AWAY YOUR CANOPY

- ⇒ Remove the metal pin from the bottom of the pole and thread the pole out the sleeve.
- ⇒ Disassemble pole and put back into the respective bag.
- ⇒ Unpeg guylines/storm straps and tie them up.
- ⇒ Unzip the canopy from the front of the tent.
- ⇒ Roll canvas up into long, thin sausage shape with other components inside.
- ⇒ Remove the final pegs.



- ⇒ Fold the canopy lengthways to make a long, thin sausage shape.

- ⇒ Measure the width of the bag up against the width of the folded canopy to make sure the tent is going to fit.




- ⇒ Place the rolled canopy onto the bag and pull the sides up around it. Finally, zip-up the bag.



- ⇒ Begin to roll the canopy as tight as possible towards the bag.



- 5. Clip all of the black plastic 'c' clips onto the pole, at either side, for additional stability.

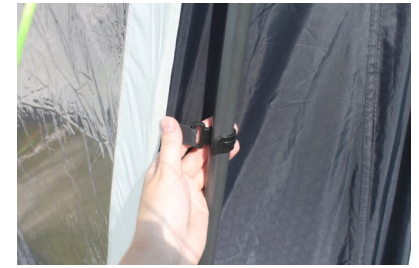

- 6. Peg out and tension the canopy; use the adjustable pegging straps to tension it as you desire. Make sure you don't over-tension the fabric. If a door zip is too tight, release some tension before closing; never force the zip.

- 7. Peg out all remaining pegging points and guylines, starting from one corner and working your way around.



- 8. Finally, peg out the 'Endurance Storm Straps' for extra stability. Please make sure that in heavier weather, you use all guylines provided to securely hold the canopy in position.

WARNING: Never un-zip the zips on the protective sleeves whilst the air-frame tubes are inflated. This will result in the tube bursting/ballooning out of the sleeve, causing damage to the tube and the sleeve; this is NOT covered under the warranty!