

Thank you for purchasing an Outdoor Revolution product. This product will give years of satisfactory service if basic instructions are followed. Our products are designed for durability, longevity and ease of erection.



WWW.OUTDOOR-REVOLUTION.COM

UNIT 1 BRICK PARK
BRETFIELD COURT
BRETTON STREET INDUSTRIAL ESTATE
DEWSBURY
WEST YORKSHIRE
WF12 9BY

In the interest of continuous development and improvements by Outdoor Revolution; some products or specifications may vary slightly from the photographs and information provided in this instruction manual. Dimensions and weights are approximate and intended as guidelines only.



CAYMAN SCREENHOUSE 4/6

INSTRUCTIONS & CARE MANUAL



- Damage caused by incorrect maintenance of the product.
- Flaws in the fabric caused by excessive use.
- Imperfections and pulls in mesh doors due to wear and tear.
- Water ingress through fabric as a result of accelerated UV degradation due to long term pitch .
- Water ingress through seams caused by excessive abrasion of seams or taped seam.
- Broken zips caused by over tensioning, forcing or snagging.
- Over tensioned/stretched seams coming apart.
- Buckles subjected to undue force or abrasion.
- Lost/popped out eyelets.
- Broken holdalls.
- Pole breakages or tube punctures (where applicable).
- Collateral damage from a pole breakage.
- Condensation, (a natural occurrence, exacerbated by insufficient ventilation opening).
- Consequential damage/loss to property/belongings (either inside or outside of the product) or shortening of holidays.

Outdoor Revolution work very closely with our retail partners to manage all warranty repairs/issues:

Please contact your retailer immediately (even if purchased online) if you feel your Outdoor Revolution product has a genuine warranty issue. The retailer, in turn will raise the issue with ourselves and we will action; with the retailer, according to the nature of the claim.

Returning Products

Please ensure the product is clean and dry and as close to its original condition as possible before sending back for checking. Wet or dirty products will not be accepted back for checking/warranty claims.

It is important to note that the Sales Contract between yourself and the retailer you purchased the Outdoor Revolution product from, remains valid throughout any warranty claim and your statutory rights are not affected.

IMPORTANT INFORMATION

- ◆ Please do not leave for your holiday without fully erecting and checking you have all the contents for your gazebo; if you're missing anything, please contact your retailer immediately before use.
- ◆ Please also note that man-made fabrics are prone to condensation when the warm air and moisture inside the gazebo comes into contact with the colder air on the outside of the gazebo fabric. This is a perfectly natural occurrence and should not be confused with leaking. Ensure all ventilation points are open whenever possible to help combat condensation.
- ◆ Ideally, erect your gazebo for some period before use - allowing it to weather. 'Weathering' can take a few uses of the gazebo before it becomes fully effective. Seam sealant can be used to solve any persistent weeps; this process is completely normal. 'Weathering' is the process of allowing your canvas product get wet, then dry approximately two to three times in order to strengthen and further waterproof the seams and stitching on the fabric.
- ◆ Make sure that before erecting, you site the gazebo on clear level ground, with no sharp objects underneath and zips fully closed. (We recommend laying a groundsheet down to keep the gazebo dry and clean).
- ◆ We suggest conducting a trial run of your gazebo to familiarise yourself with the set up and use of the gazebo. If you have any issues relating to pitching your gazebo, please contact your dealer for assistance before going on holiday.
- ◆ Please note this gazebo is designed for 'touring' and not for permanent pitch.
- ◆ After use, always dry and air the gazebo before packing away to prevent mildew or mould.
- ◆ Any dirt or stains can be removed by brushing or gently washing with warm water. DO NOT use detergents, as this will destroy the waterproofing on the fabrics.
- ◆ DO NOT cook or smoke in this gazebo; although the outer fabric is flame retardant treated, it will still melt.
- ◆ In the event of damage; please contact your retailer. If for whatever reason you are unable to contact them, please email: cs@blue-diamond-products.co.uk and our customer service team will be happy to help!
- ◆ Please avoid using this gazebo in temperatures below freezing, as this can result in cracking of the air-frame.
- ◆ DO NOT use bleach to clean your gazebo under any circumstances.

OPTIONAL ACCESSORIES

- ◆ Privacy Panels—A pair of solid panels, which can be attached to any of the mesh side panels for further privacy and protection against the elements.

⇒ **Extensive collection of complementary accessories...**

Visit www.outdoor-revolution.com for more information.

12 MONTH WARRANTY

On the Workmanship & Canvas Against Any Manufacturing Faults.

OUTDOOR REVOLUTION GUARANTEE

Outdoor Revolution products are designed and produced to the very highest of manufacturing standards, using the best quality fabrics or components available for each specific model. Rigorous quality control of finished products is in place.

All manufactured products are:

- Quality controlled to be free from minor defects.
- Fit for the purpose that they are intended for.
- Manufactured to a satisfactory quality.

It is important that correct care is taken when opening, erecting, using, and just as importantly, packing away the product. Following these rules will keep your product in reliable working condition for many years. Failure to adhere to these simple guideline may cause unnecessary damage to the product (see formal instructions for handling or erection tips). A repair kit is included with each of our products to help resolve any minor issues.

THE WARRANTY

The Outdoor Revolution Warranty lasts for twelve months from the original date of purchase; please keep all receipts or copies of any relevant transaction to substantiate the purchase date. This warranty only covers the workmanship, fabric and components. Any faults found within six months of purchase will be investigated by Outdoor Revolution. Faults found outside of the initial six months of purchase will need to be proven by you, the purchaser, in line with current consumer legislation, after the short term right to reject has concluded. **Please note that this warranty requires registration on our website.**

Retailer will not refund a purchase if no fault is found.

The manufacturers warranty does not cover the following:-

- General wear and tear over extended periods of use or, seasonal pitching of the product.
- Accelerated UV damage caused by excessive, long term sun exposure.
- Accidental damage caused by but not exclusive to, human, animal or weather.

PACKING AWAY YOUR GAZEBO

- ◆ Zip up any windows/doors before packing away your gazebo.
- ◆ Unpeg all guylines, storm straps and most of the pegs from around the gazebo, leaving only the four corners secured.
- ◆ Unpeg each of the four corners.
- ◆ Fold each panel on the gazebo down to return the fibreglass pop up frame system into its original position.



Remove the vertical roof support struts by the doorway.

Climb inside the gazebo and down pull down the roof panel.



Push in each of the side panels, allowing the gazebo to collapse on itself and return to its original position.

Fold up each of the poles on the fibreglass pop up system, as demonstrated in the right hand image, before pushing this into the designated carry bag; compress this as much as you desire for ease of transportation, however, be careful to not damage the frame.



PLEASE READ THE INSTRUCTIONS CAREFULLY

TIP: Refer to the photographs to help when pitching your 'Cayman Screenhouse 4/6'.



1. Spread the flysheet out on the ground, as flat as possible.



2. Peg down the four corners of the gazebo using the designated pegging points. This keeps the gazebo in place whilst you pitch it; you may need to re-adjust them afterwards.



3. Fold up each of the poles, as shown, so that they are all touching ends .

4. Lift the top panel up, whilst pulling each side panel out by the corresponding metal pulling loop on either side, then the integral fibreglass poles will simply pop into place. We recommend having two people to do this; one to hold the roof and another to pull out the sides. If you are having trouble gripping these loops, you can thread through a guyrope to simplify the process.



5. Now the gazebo should look as shown. Next, climb into the gazebo and push up the roof panel from the interior.

6. Locate the two additional support poles and erect them. Slot these into the corresponding sleeves inside the awning, until they are as shown!



7. Should you have the optional privacy panels, simply Velcro-in the solid panels for additional privacy and wind resistance during poorer weather conditions, or leave them off completely throughout summer.