

Thank you for purchasing an Outdoor Revolution product. This product will give years of satisfactory service if basic instructions are followed. Our products are designed for durability, longevity and ease of erection.



WWW.OUTDOOR-REVOLUTION.COM

UNIT 1 BRICK PARK
BRETFIELD COURT
BRETTON STREET INDUSTRIAL ESTATE
DEWSBURY
WEST YORKSHIRE
WF12 9BY

In the interest of continuous development and improvements by Outdoor Revolution; some products or specifications may vary slightly from the photographs and information provided in this instruction manual. Dimensions and weights are approximate and intended as guidelines only.



KEY WEST

INSTRUCTIONS & CARE MANUAL



IMPORTANT: PLEASE CHECK YOUR EQUIPMENT

1 X FLYSHEET (OR OUTER)

1 X SINGLE INFLATION POINT OXYGEN AIR FRAME

1 X FIBREGLASS CANOPY POLE

1 X DUAL ACTION HAND PUMP

1 X BAG OF GROUND PEGS

1 X REPAIR KIT

1 X CARRY BAG

GUYLINES



We recommend that you insure your drive away awning against storm damage, or accidental damage, as the warranty does not cover such eventualities. The manufacturer **IS NOT** liable for any damage caused to the drive away awning, or its contents, due to misuse, incorrect pitching, or severe weather conditions; full warranty details are on the rear of this booklet.

- Damage caused by incorrect maintenance of the product.
- Flaws in the fabric caused by excessive use.
- Imperfections and pulls in mesh doors due to wear and tear.
- Water ingress through fabric as a result of accelerated UV degradation due to long term pitch .
- Water ingress through seams caused by excessive abrasion of seams or taped seam.
- Broken zips caused by over tensioning, forcing or snagging.
- Over tensioned/stretched seams coming apart.
- Buckles subjected to undue force or abrasion.
- Lost/popped out eyelets.
- Broken holdalls.
- Pole breakages or tube punctures (where applicable).
- Collateral damage from a pole breakage.
- Condensation, (a natural occurrence, exacerbated by insufficient ventilation opening).
- Consequential damage/loss to property/belongings (either inside or outside of the product) or shortening of holidays.

Outdoor Revolution work very closely with our retail partners to manage all warranty repairs/issues:

Please contact your retailer immediately (even if purchased online) if you feel your Outdoor Revolution product has a genuine warranty issue. The retailer, in turn will raise the issue with ourselves and we will action; with the retailer, according to the nature of the claim.

Returning Products

Please ensure the product is clean and dry and as close to its original condition as possible before sending back for checking. Wet or dirty products will not be accepted back for checking/warranty claims.

It is important to note that the Sales Contract between yourself and the retailer you purchased the Outdoor Revolution product from, remains valid throughout any warranty claim and your statutory rights are not affected.

OUTDOOR REVOLUTION GUARANTEE

Outdoor Revolution products are designed and produced to the very highest of manufacturing standards, using the best quality fabrics or components available for each specific model. Rigorous quality control of finished products is in place.

All manufactured products are:

- Quality controlled to be free from minor defects.
- Fit for the purpose that they are intended for.
- Manufactured to a satisfactory quality.

It is important that correct care is taken when opening, erecting, using, and just as importantly, packing away the product. Following these rules will keep your product in reliable working condition for many years. Failure to adhere to these simple guideline may cause unnecessary damage to the product (see formal instructions for handling/erection tips). A repair kit is included with each of our products to help resolve any minor issues.

THE WARRANTY

The Outdoor Revolution Warranty lasts for twelve months from the original date of purchase; please keep all receipts or copies of any relevant transaction to substantiate the purchase date. This warranty only covers the workmanship, fabric and components. Any faults found within six months of purchase will be investigated by Outdoor Revolution. Faults found outside of the initial six months of purchase will need to be proven by you, the purchaser, in line with current consumer legislation, after the short term right to reject has concluded. **Please note that this warranty requires registration on our website.**

Retailer will not refund a purchase if no fault is found.

The manufacturers warranty does not cover the following:-

- General wear and tear over extended periods of use or, seasonal pitching of the product.
- Accelerated UV damage caused by excessive, long term sun exposure.
- Accidental damage caused by but not exclusive to, human, animal or weather.

IMPORTANT INFORMATION

- ◆ Please do not leave for your holiday without fully erecting and checking that you have all the listed contents for your drive away awning. If you are missing anything, then please contact your retailer immediately before use.
- ◆ Please note that man-made fabrics are prone to condensation, when the warm air and moisture within the drive away awning, comes into contact with the colder air on the outer material. This is a perfectly natural occurrence and should not be confused with leaking. Please ensure that all ventilation points remain open, wherever possible, in order to help combat condensation.
- ◆ We suggest that you pitch your drive away awning for some period before use, enabling it to undergo the 'weathering' process. Weathering can require a few uses of the drive away awning, before it becomes fully effective. Seam sealant can be used to resolve any persistent weeps; this is a natural process. 'Weathering' is the process of allowing your drive away awning to become completely soaked, then dried, two to three times, to reinforce the waterproofing of the seams/stitching.
- ◆ Please ensure that you site the drive away awning on clear/level ground before erecting, with no sharp objects beneath and zips fully enclosed. We suggest placing a groundsheet underneath the drive away awning to keep it dry/clean.
- ◆ We suggest conducting a trial run of your drive away awning to familiarise yourself with the assembly/usability of it. Should you have any issues in relation to pitching your drive away awning; please contact a dealer for assistance before your holiday.
- ◆ Please note that this model is designed for touring use and not long term pitch.
- ◆ Always dry/air the drive away awning after use, before packing away, to prevent mildew or mould from developing.
- ◆ Any dirt or stains can be removed by brushing, or gently washing, using warm water. DO NOT use detergents, as this will destroy the waterproofing of the materials.
- ◆ DO NOT cook or smoke inside this drive away awning, as despite the outer fabric being flame-retardant, it will still melt.
- ◆ In the event of damage; please contact your retailer. If, for whatever reason, you are unable to contact them, then please email cs@blue-diamond-products.co.uk and our dedicated customer service team will be pleased to assist you.
- ◆ Please avoid using this drive away awning in temperatures below freezing, as this can result in cracking of the Oxygen Air Frame.
- ◆ Always store your drive away awning bag flat, never on the side, in a cool/dry area, in order to avoid any detrimental impact on the Oxygen Air Frame.

OPTIONAL ACCESSORIES

Lumi-Link Tube Light Kit—A triple remote controlled dimmable roof strip light kit, which illuminate the internal living space with a cosy evening ambience.

Two Person Inner Tent—A dark roofed micro-polyester sleeping bedroom, designed to comfortably accommodate two average sized adults or a double air mattress.

Endurance Storm Straps— A pair of adjustable tensioning straps, which are perfect for maximising stability during adverse weather conditions, or providing a means of fixing your drive away awning to a campervan or motorhome.

⇒ Visit www.outdoor-revolution.com for more information.

12 MONTH WARRANTY

On Workmanship & Canvas Against Any Manufacturing Faults

TROUBLE SHOOTING

<u>PROBLEM</u>	<u>REASON</u>	<u>SOLUTION</u>
The Oxygen Air Frame is deflating after removing the pump.	The 'Boston Valve' has not been properly opened.	Open the Boston Valve and push any air out of the tubes before packing away.
The awning is leaking water.	The canvas requires 'weathering' two to three times before the seams fully seal themselves, therefore you may experience some weeping. This could also be condensation; an inevitable occurrence.	Allow the drive away awning to get soaked, then dried, two to three times. Open any ventilation points to optimise air circulation and reduce condensation.
Bowing and twisting of the tubes.	The tubes may twist inside the sleeves, particularly when packing away, so next time the tube bows...	Unzip the sleeve whilst the tube is deflated and reposition the tube.

IN THE EVENT OF A PUNCTURE

If you have a small puncture in your Oxygen Air Frame Tube, you can easily repair it using the standard puncture repair kit.

- ◆ To remove the Oxygen Air Frame Tube, deflate the tube, then unzip the two protective sleeves over the tube and simply pull it out; please do not unzip the sleeves whilst the tube is inflated.
- ◆ Locate and repair the puncture on the Oxygen Air Frame bladder.
- ◆ Place the Oxygen Air Frame Tube back into the sleeves, in the correct place, with the valves in their respective sockets; make sure that the tube is not twisted.
- ◆ Zip each of the two sleeves back up fully.
- ◆ Inflate the Oxygen Air Frame Tube, ensuring that the puncture has been repaired.
- ◆ If this process doesn't work, you may need to purchase a new bladder.

Spare air-frame bladders can be purchased to replace damaged ones. Visit the **spares section at: www.outdoor-revolution.com or contact us on **01924 455 313**.

****Awnings & Tents will not be replaced because of damaged bladders****

PACKING AWAY YOUR DRIVE AWAY AWNING

- ◆ Zip up any windows or doors before deflating.
- ◆ Unpeg all guylines, storm straps and most of the pegs around the drive away awning, leaving only each of the four corners pegged out.
- ◆ Open the Boston Valve.
- ◆ Unpeg each of the four corners.



Allow the drive away awning to collapse on itself, compressing as much air out of the canvas/tubes as possible.

Fold the drive away awning on itself vertically to form a rectangular shape.



Fold the drive away awning on itself to create a streamlined 'sausage' shape. Measure the width of the drive away awning against the bag to ensure that it will fit inside. Begin rolling the drive away awning, compressing any air out as you roll.

Rotate the rolled drive away awning onto the bag and pull the sides up around it, before zipping up the bag.



PLEASE READ THE INSTRUCTIONS CAREFULLY

TIP: Refer to the photographs for assistance when pitching your **Key West**.

1. Spread the flysheet out on the ground next to your vehicle, with the cowl side laying parallel to it.



2. Secure the four corners of the drive away awning down, using the adjustable pegging points to hold the drive away awning in position, whilst you inflate it; these may require readjustment afterwards.

3. Locate the Boston Valve, insert the pump nozzle and begin to carefully inflate.



4. Inflate the Oxygen Air Frame until you can give it a 'good squeeze', as the tube requires room inside for air to expand, should there be an increase in the ambient temperature; please ensure that no part of the fabric is caught anywhere, then replace the cap. We suggest someone holds the hose in place, whilst another inflates, for maximum efficiency.

5. Replace the cap on the Boston Valve to avoid getting water inside.





7. Assemble each section of the fibreglass front eyebrow canopy pole and thread it through the corresponding sleeve on the canvas, before inserting each end into the designated eyelets.

8. Tension the front of the drive away awning as much as you desire, securing any adjustable pegging points, whilst using the strap along the floor, on the inside, to make sure the tubes are situated correctly; please ensure that you do not overtension the fabric whilst doing this.




9. Peg down any available pegging points, guylines, or storm straps, starting from the corner against the vehicle, before working your way around the drive away awning.

10. Take the awning piping and slide it through the awning channel, until the awning is in the desired position on the vehicle. We recommend using a **Drive Away Kit**, as it will make this process *much* easier.



11. Secure the bottom of the cowl, using the adjustable pegging points, in order to prevent this from flapping around in the wind.

*Note: Threading the cowl on or off the vehicle can be quite difficult once the awning is in position; we recommend using a **'Drive Away Kit'**, which makes it much easier to attach. The images below demonstrate this.

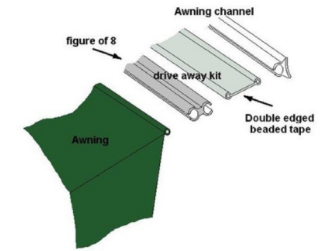

There is a video on the **'Hints and Tips'** section of the **'Outdoor Revolution'** website, explaining how to use a drive away kit: www.outdoor-revolution.com

Note: Alternatively there is a **'Magnetic Drive-Away Strip'**, which can be used with smaller, magnetic vehicles. The image below demonstrates this:



WARNING: Never unzip the zips on the protective sleeves whilst the Oxygen Air Frame Tubes are inflated. This will result in the tube bursting/ ballooning out of the sleeve, causing damage to the tube and sleeve; this is NOT covered under warranty.